



Open 824RL/W VoIP Dial Plan

Application Note: VoIP DIAL PLAN

Copyright

Copyright© 2006 OPEN Networks Pty Ltd. All rights reserved. The content of this manual is subject to change without notice. The information and messages contained herein are proprietary to OPEN Networks Pty Ltd. No part of this manual may be translated, transcribed, reproduced, in any form, or by any means without prior written permission by OPEN Networks Pty Ltd.

Disclaimer

For content and procedures available in this document, OPEN Networks Pty Ltd does not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of any information, apparatus, product, or process disclosed.

Release: v.2.0

Date Released: September, 2006

Table of Contents

1. Introduction	3
1.1 Purpose.....	3
1.2 Audience	3
1.3 Requirements.....	3
2. Log In	4
3. Setup VoIP Dial Plan	5

1. Introduction

1.1 Purpose

The purpose of this Application Note is to provide step-by-step instructions to set up a VoIP Dial Plan on the 824RL/W range of modems. This document will refer to all listed models as 824RL/W.

1.2 Audience

This document is intended for a technical audience.

1.3 Requirements

 
You must be able to connect to the unit from the LAN computer's web browser.

2. Log In

Step 1: Open a web browser and type the following in the Address bar:
http://192.168.1.254



If you have changed the LAN IP address from the default you will need to connect to the new address.

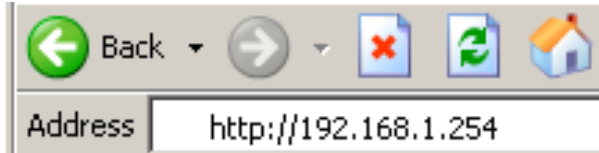

Step 2: In the *Log In* screen, enter the **Username: 'admin'** and **Password: 'admin'**.



3. Setup VoIP Dial Plan

Step 1: Click on **Configuration** on the left, select **VoIP** and **VoIP Dial Plan**.

OPEN824RLW VoIP/ADSL2+ Wireless Router (Lifeline)

VoIP Dial Plan Configuration

Port	Dial Plan	
1	(x.T[*90x.TS]x#S]##S]*74x.#S)	Edit
2	(x.T[*90x.TS]x#S]##S]*74x.#S)	Edit


Step 2: Click the **Edit** option for port you wish to apply the dial plan to. The example below configures **Port 1**.

OPEN824RLW VoIP/ADSL2+ Wireless Router (Lifeline)


VoIP Dial Plan Configuration

Port	Dial Plan	
1	(x.T[*90x.TS]x#S]##S]*74x.#S)	Edit
2	(x.T[*90x.TS]x#S]##S]*74x.#S)	Edit

 Step 3: Click **Delete** on the existing **Dial Plan Rule Name**, (x.T).

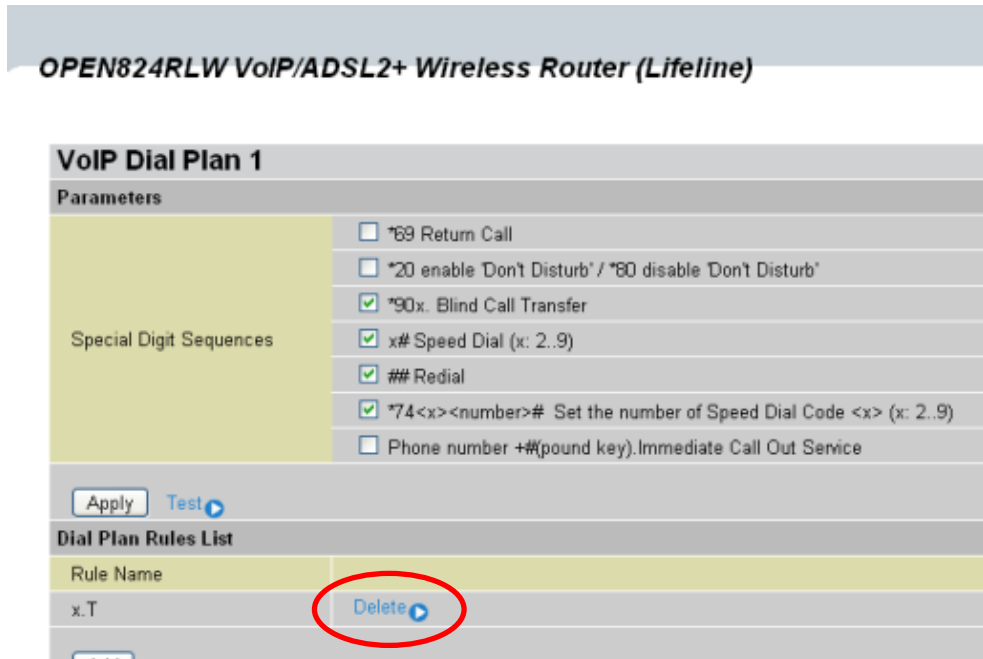

 Step 4: The following screen will appear. Click the **Delete** Button.

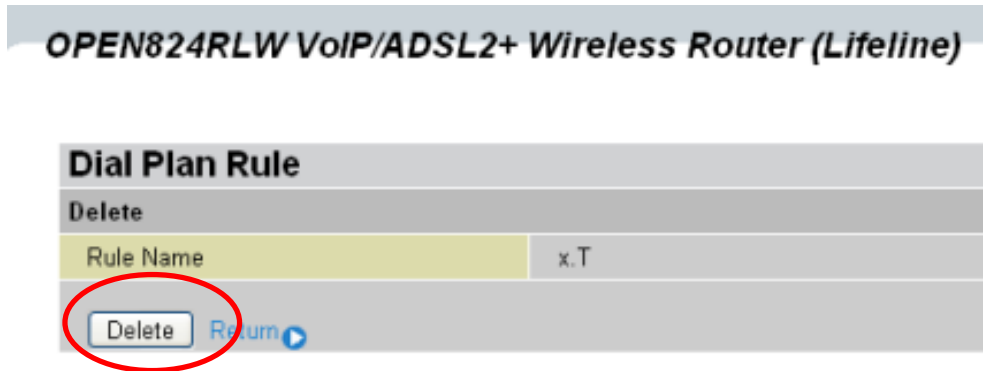

Step 5: On the following screen click **Add**.

VoIP Dial Plan 1

Parameters

Special Digit Sequences

- *69 Return Call
- *20 enable 'Don't Disturb' / *80 disable 'Don't Disturb'
- *90x. Blind Call Transfer
- x# Speed Dial (x: 2..9)
- ## Redial
- *74<x><number># Set the number of Speed Dial Code <x> (x: 2..9)
- Phone number +#(pound key). Immediate Call Out Service

Apply Test

Dial Plan Rules List

Rule Name

Add

Step 6: In the **Prepend** field type in the numbers **1831** and in the **Main Digit Sequence** type in **x**. (this is a lower case x followed by a full-stop).

Create Rule

Parameters

Prefix Processing

- Prepend 1831 unconditionally
- If prefix is , delete it
- If prefix is , replace with
- No prefix

Main Digit Sequence x.

Apply Return

Digit Sequence Example:

x.	Any digit number between 0 and 9 in variable length. Ma
xxx.	Any 3 digit number only between 0 and 9. Total length is
...	Any number between 0 and 9 with variable length but no

Step 7: Click **Apply**.

Create Rule

Parameters

Prefix Processing

Prepend 1831 unconditionally

If prefix is , delete it

If prefix is , replace with

No prefix

Main Digit Sequence

Apply [Return](#)

Digit Sequence Example:

x.	Any digit number between 0 and 9 in variable length. Maximum length is 16.
xxx	Any 3 digit number only between 0 and 9. Total length is 3. No period needed (.)
xxxx.	Any number between 0 and 9 with variable length but no shorter than 3 digits. Maximum Length is 16.
123x.	Any number (0-9) starting with 123. Maximum length is 16.
{124}x.	Any number (0-9) starting with 1 or 2 or 4. Maximum length is 16.
{1-3}x.	Any number(0-9) starting with number 1 to 3. Maximum length is 16.

Step 8: The new **Rule Name** will appear. Select **Save Config** down the bottom.

Special Digit Sequences

*20 enable 'Don't Disturb' / *80 disable 'Don't Disturb'

*90x. Blind Call Transfer

x# Speed Dial (x: 2..9)

Redial

*74<x><number># Set the number of Speed Dial Code <x> (x: 2..9)

Phone number +#(pound key).Immediate Call Out Service

Apply [Test](#)


Dial Plan Rules List

Rule Name	
<1831>x.T	Delete



Add

SAVE CONFIG **RESTART** **LOGOUT**

Step 9: Select **Apply**.

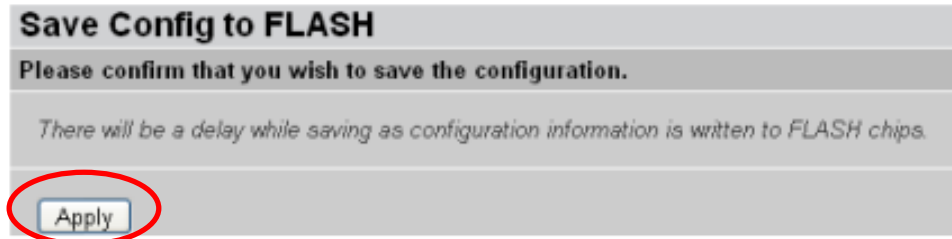

  Step 10: Click **OK** on the dialogue box and **Restart** the 824RL/W for new settings to take affect.

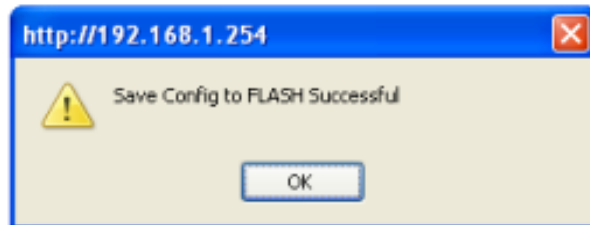

New VoIP Dial Plan is now configured.